


NOVA NSV Model Operational Manual

<1> **BUTTON LOCATION:**

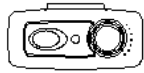


P-Playback Button

◀ -Power Button

▶ -Light Button

Top-Reset Button

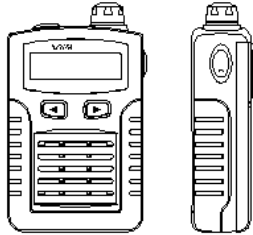

<2> **SCREEN SYMBOLS:**



Battery On Indication



Flash - "Auto ON/OFF" Function



Message Lock Indication



Tone Alert Mode



Vibrate Alert Mode



Alert Function On



Low Battery Indication



Right Button to Press for Operation



Out of Range

<3> PAGER CONTROLS:

Power Button:

Press and hold the power button for one second to turn on pager.

Light Button:

Press two seconds to turn on LCD and press again to turn off. Once the light is on, it will automatically goes off after 6 seconds if there is no further instruction given.

Playback Button:

Press to display the receiving time of the Incoming Voice Message . One short alert tone will be activated if there are no voice messages available.

Reset Button:

Press to turn on the audio. Once the reset switch is released the pager will return to the standby mode.

Press and hold the key for two seconds, the audio will lock on until the pager is manually reset by depressing and releasing the reset switch. The pager audio will turn off and the pager will return to the standby mode.

Volume Knob:

Controls audio volume

LED:

The flash will be faster, to indicate unread message.

<4> Stand by Mode:

Pager displays date/time and selected functions

<5> Function Menu:

Press Power Button to enter into the function menu and scroll through the functions. Backward scroll with light button. The Selections are:

1. Set Alert
2. Power Off
3. Set Alarm 1
4. Set Alarm 2
5. Set Time/month/day of month
6. Set Auto On/Off
7. Set 12/24 H
8. Delete message
9. Delete All Message



www.sequent.com

Suite 135 – 4474 Blakie Rd., London, Ontario, Canada N6L 1G7
V: +1.519.652.0401 F: +1.519.652.9275

<5.1> Alert Mode Setting:

1. Press Power Button to enter into the function menu and scroll through the functions. The LCD displays: VIB?
2. Press Playback Button to change from Tone to Vibrate.

<5.2> Power Off:

1. Press Power Button to enter into the function menu and scroll through the functions. The LCD displays: OFF?
2. Press playback button to confirm the setting, all the functions will stop and Auto On/Off icon will stay on the left corner if the function is on.

<5.3> Set Alarm:

1. Press Power Button to enter into the function menu and scroll through the functions. The LCD will display: ALARM SET?
2. Press playback button to enter alarm setting.
3. Under Alarm Off status, the LCD will display: ALARM ON?
4. Press light button to switch "Alarm Off".
5. Under "Alarm On" status, press Playback Button to start setting.
6. Press Light Button to change the value of the digit.
7. Press Playback Button to confirm the setting and advance to the position of the next digit.
8. Press Power Button to move to the position of the last flashing digit.
9. The Clock Icon will be displayed in the LCD to indicate Alarm is on and return to the standby mode.

<5.4> Set Time/Month/Day of Month

1. Press Power Button to enter into the function menu and scroll through the functions. The LCD will display: TIME?
2. Press Playback button to enter Time Setting.
3. Press Light Button to change the value of the digit
4. Press Playback Button to confirm the setting and advance to the position of the next digit.

<5.5> Set Auto On/Off:

This function allows programming a specific time within which the pager will receive a message but will not alert.



-
1. Press Power Button to enter into the function menu and scroll through the functions. The LCD will display: **AUTO SET?**
 2. Press Playback button to enter Auto On/Off Setting. The LCD will display: **AUTO ON?** under "Auto Off" status.
 3. Press Light Button to switch to "Auto Off". Press Playback Button to start setting.
 4. Press Light Button to change the value of the digit.
 5. Press Power On/Off Button to move to the position of the last flashing digit.
 6. Press Playback Button to confirm the setting and advance to the position of the next digit.
 7. The first value to enter is the time for "Auto On".
 8. The second value to enter is the time for "Auto Off".
 9. The Auto On/Off Icon will flash in the LCD when "Auto On/Off" function is on.

<5.6> Set 12/24 Hr.

This function allows you to select the 12-hour or 24-hour time format.

1. Press Power Button to enter into the function menu and scroll through the functions. The LCD will display: **24H?**
2. Press Playback button to confirm the setting.

<5.7> Single Message Deletion:

1. Press Power Button to enter into the function menu and scroll through the functions. The LCD will display: **DEL?**
2. Press Playback button to enter to the Single Message Deletion Setting. One short tone alert will be activated if there is no voice message available.
3. Press Light Button to the position of the next message. The pager will return to the standby position after the last message being displayed.
4. Press Power On/Off Button to move to the position of the last message.
5. Press Playback Button to delete the message being displayed and return to the Standby position.



<5.6> Delete All Messages:

1. Press Power Button to enter into the function menu and scroll through the functions. The LCD will display: **DEL ALL?**
2. Press Playback Button to confirm the setting and return to the standby position.
3. One short alert tone will be activated if there is no voice message available.

<6> Message Processing – Reading a Message:

1. Under Standby Condition, press Playback Button will scroll through the messages. One short alert tone will be activated if there is no voice message available and then the pager will return to the standby condition.
2. Press Light Button to move to the message content of the next message. The pager will return to the standby mode after the last message content being displayed.
3. Press Power Button to move to the message content of the previous message. Maximum 16 Incoming Voice Messages will be stored.

<6.1> Message Interpretation:

The message is divided into two sections:

The first section is the source address:

- a) 5 : 22999678
5th Message: Message

The second section is the time and date the message was received:

- b) 10:21A 9-09
10:21am September 9th.



www.sequent.com

Suite 135 – 4474 Blakie Rd., London, Ontario, Canada N6L 1G7
V: +1.519.652.0401 F: +1.519.652.9275